

# INSTALLATION GUIDE


## CREATON UAB underlay connection tape



The "UAB" underlay connection tape is a self-adhesive butyl tape with creped polyethylene lamination which can be used along any superstructure to connect with the roofing membrane. The connection tape is sensitive to UV radiation; therefore it should be covered as soon as possible after installation.

The surfaces to be connected must be dry, clean, and free from all contaminants. Before using the tape on porous surfaces apply primer to the surface.

There should be a rigid formwork below the connection are!

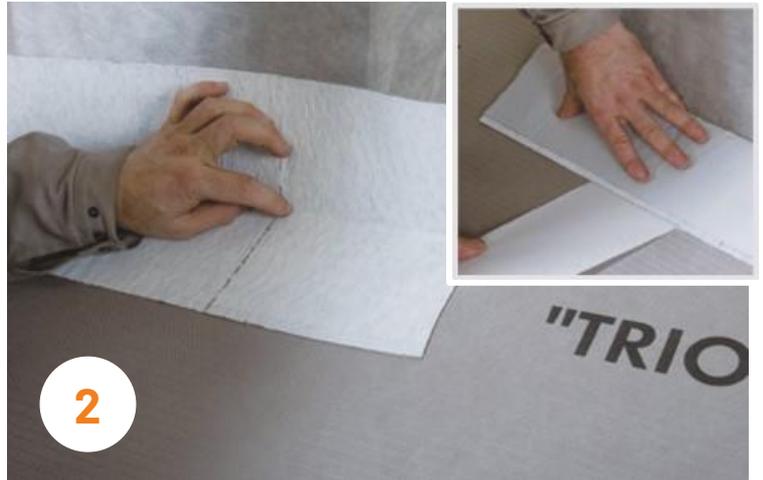

Cut the tape according to the size of the chimney, leaving an extra 5 cm at least on the left and right. Pull off the top and bottom protective silicone film from the adhesive and press the tape onto the chimney.



Cut the overhanging parts on the side at an angle and press them onto the surfaces to be bonded.

Cut the overhanging side diagonally and press them onto the connecting wall and into the surface of the membrane.




Cut a piece from the roll for the side of the chimney, which match the length of the chimney plus an overhang of at least 10 cm on each side. Remove the silicone film and stick it on the wall.

Cut the overhanging part in the ridge side diagonally and press them onto the connecting wall and into the surface of the membrane.



5  
Cut out the upper corner in the overhanging part of the eave side. The remaining overhang should be approx. 3 cm. The creped lamination makes it possible to carefully fold the overhangs into the chimney and into the underlayment.

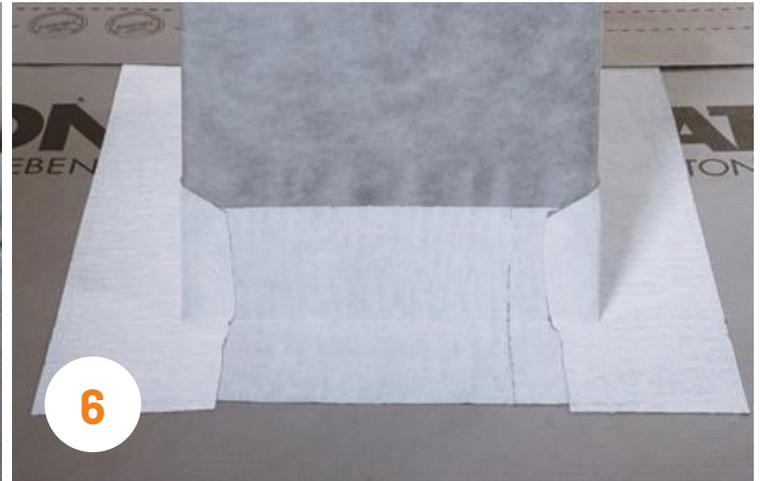


6  
Perform this operation identically on both sides.



7  
Depending on the chimney width, cut the UAB connection tape to length plus an overhang on both side of at least 10 cm. Fold the film in half and position it on the side of the chimney facing the ridge.

Pull off the protective film and attach the tape to the chimney. Cut the lateral part vertically with an overhang of approx. 3 cm and sideways also at the corner of the chimney.

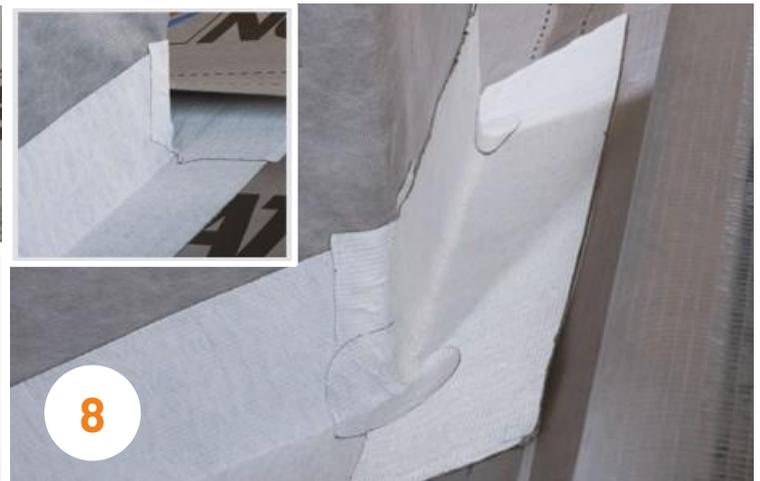

8  
Seal the corner with a circle. The diameter should be at least 8 cm.

**i** The specifications of national regulations (such as ZVDH, ÖNORM or SIA standards) as well as national and European standards (such as DIN or EN) must be kept.

- The installer is responsible for the processing and installation of the products in accordance with the assembly instructions and the resulting tightness in the sub-roof.
- CREATON South-East Europe Kft. has no responsibility for damage caused by improper installation.

**The material of the roofing membranes is not resistant to oils (e.g. lubricating oil), wood preservatives and organic solvents!**